


Audi A6

Current Flow Diagram

No. 40 / 4

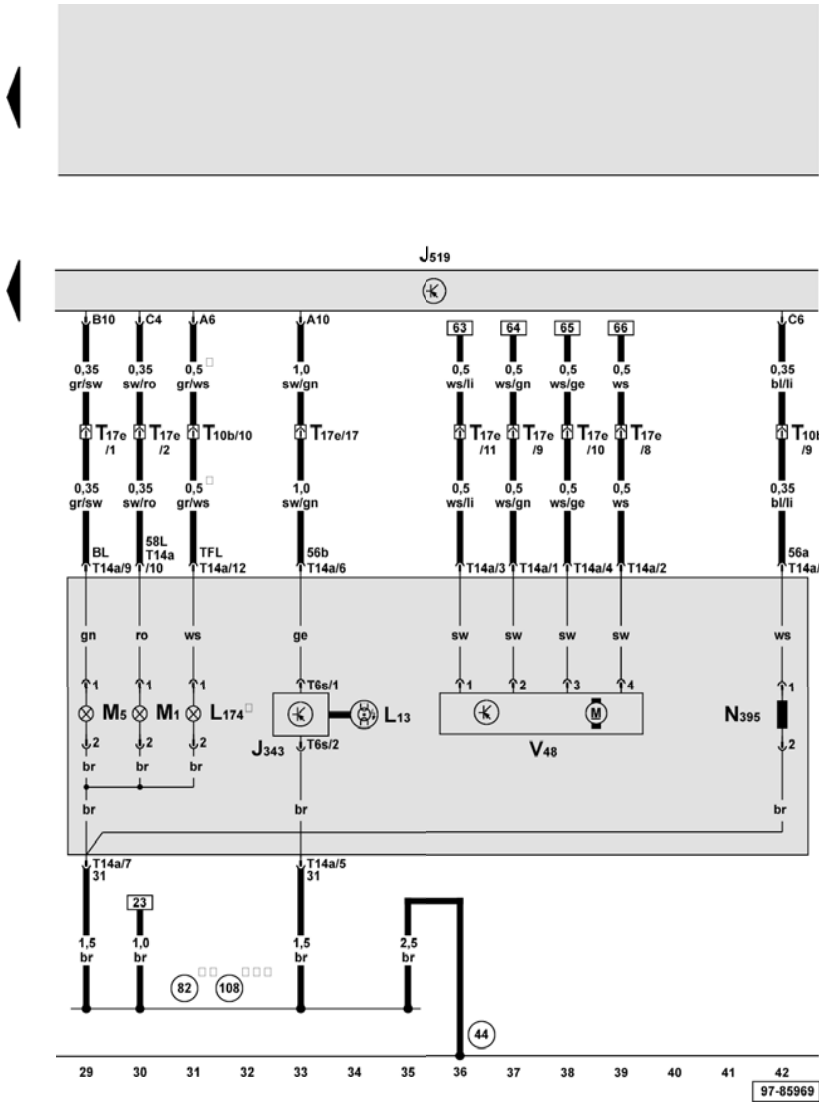

- Onboard supply control unit, left gas discharge light control unit**
- F320 - Bixenon solenoid switch for mask
  - J343 - Left gas discharge light control unit
  - J519 - Onboard supply control unit
  - L13 - Left gas discharge (xenon) bulb
  - L174 - Left day driving light bulb
  - M1 - Left side light bulb
  - M5 - Front left turn signal bulb
  - N395 - Left headlight screen adjustment solenoid
  - T6s - 6-pin connector, black, on left gas discharge light control unit
  - T10b - 10-pin connector, blue, coupling station on left of A-pillar
  - T14a - 14-pin connector, black, on left of headlight
  - T17e - 17-pin connector, red, coupling station on left of A-pillar
  - V48 - Left headlight range control motor
  - 44 - Earth point, lower part of left A-pillar
  - 82 - Earth connection 1, in front left wiring harness
  - 108 - Earth connection 2, in front left wiring harness
  - \* - models with day driving light
  - \*\* - up to October 2005
  - \*\*\* - from November 2005

ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = purple  
ge = yellow  
or = orange  
rs = pink

Audi A6

Current Flow Diagram

No. 40 / 5