


Audi A6

Current Flow Diagram

No. 113 / 11

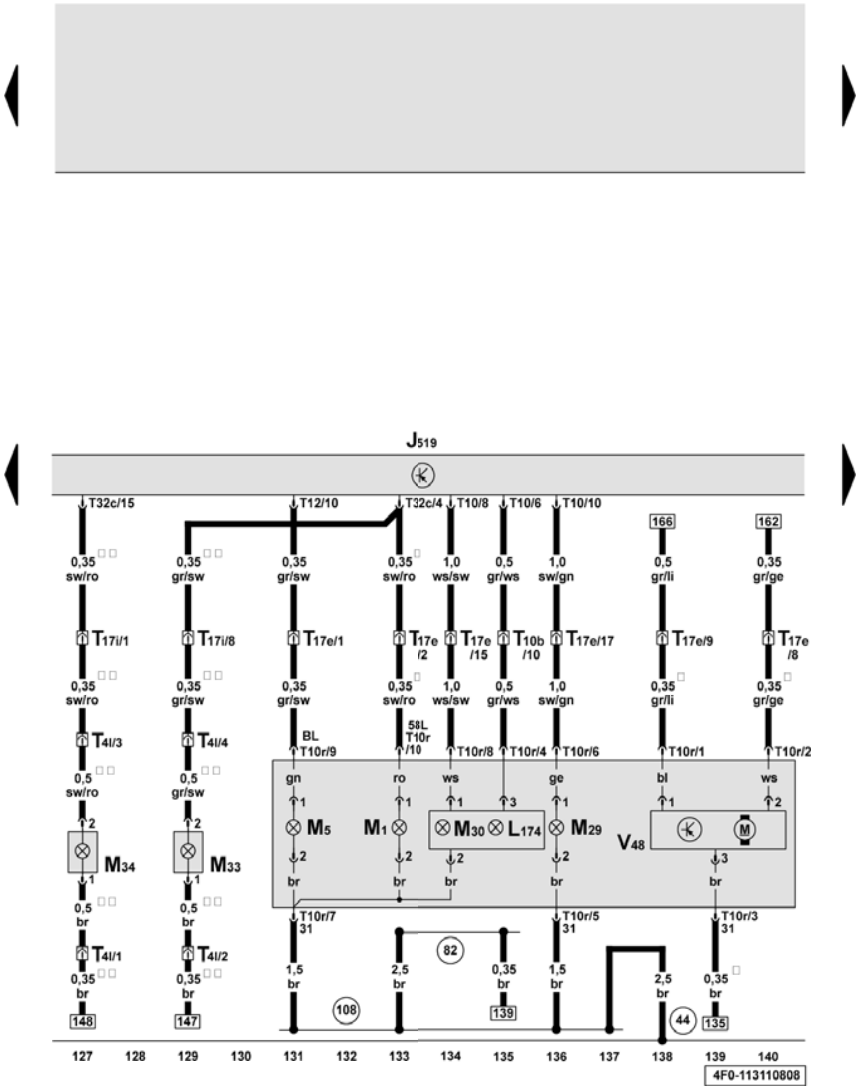

Onboard supply control unit, left headlight

- J519 - Onboard supply control unit
- L174 - Left daytime running light bulb
- M1 - Left side light bulb
- M5 - Front left turn signal bulb
- M29 - Left dipped beam bulb
- M30 - Left main beam bulb
- M33 - Front left side marker bulb
- M34 - Front right side marker bulb
- T4l - 4-pin connector, black, on front right in engine compartment
- T10 - 10-pin connector, black, connector A, on onboard power supply control unit
- T10b - 10-pin connector, blue, coupling station on left A-pillar
- T10r - 10-pin connector, black, on left headlight
- T12 - 12-pin connector, black, connector B, on onboard power supply control unit
- T17e - 17-pin connector, red, coupling station on left A-pillar
- T17i - 17-pin connector, red, coupling station on right A-pillar
- T32c - 32-pin connector, white, connector C, on onboard power supply control unit
- V48 - Left headlight range control motor
- 44 - Earth point, lower part of left A-pillar
- 82 - Earth connection 1, in front left wiring harness
- 108 - Earth connection 2, in front left wiring harness
- * - not USA
- ** - only USA

Audi A6

Current Flow Diagram

No. 113 / 12