


Audi A6

Current Flow Diagram

No. 56 / 5

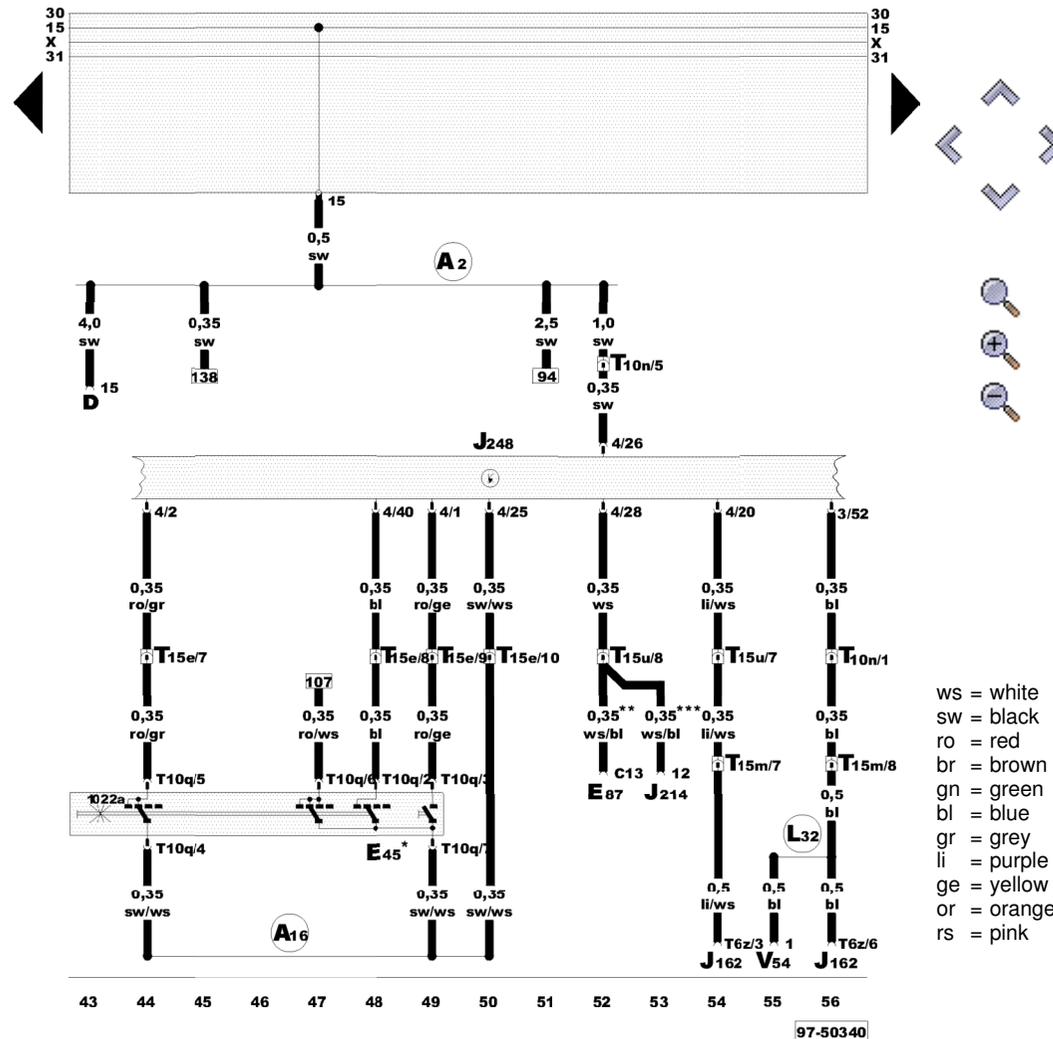

Diesel direct injection system control unit, cruise control system

- D - Ignition/starter switch
- E45 - Cruise control system switch
- E87 - Control and display unit for air conditioner
- J162 - Heater control unit
- J214 - Thermotronic control unit
- J248 - Diesel direct injection system control unit
- T6z - 6-pin connector, on auxiliary heater control unit
- T10n - 10-pin connector, orange, connector point, electronics box, plenum chamber
- T10q - 10-pin connector, black, on cruise control system switch
- T15e - 15-pin connector, white, connector point, electronics box, plenum chamber
- T15m - 15-pin connector, white, connector point, A pillar, left
- T15 - 15-pin connector, red, connector point, electronics box, plenum chamber
- V54 - Metering pump
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A16 - Connection (cruise control system), in dash panel wiring harness
- L32 - Connection -1-, in heater unit wiring harness

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

- * - Models with cruise control system
- ** - Models with air conditioner
- *** - Models with Thermotronic