


Audi A6

Current Flow Diagram

No. 1 / 25

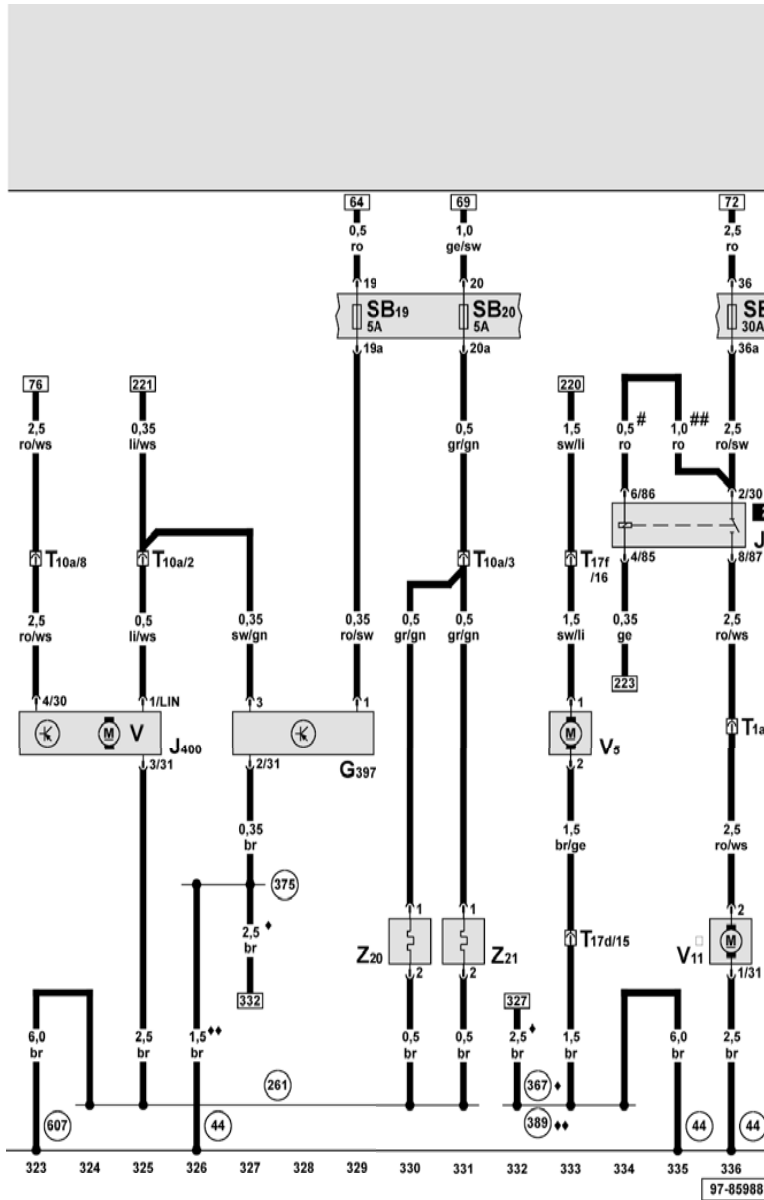

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Wiper motor control unit, rain and light detector sensor, washer jet heater element, headlight washer system pump, washer pump

- G397 - Rain and light detector sensor
- J39 - Headlight washer system relay
- J400 - Wiper motor control unit
- SB19 - Fuse 19 on fuse holder
- SB20 - Fuse 20 on fuse holder
- SB36 - Fuse 36 on fuse holder
- T1a - 1-pin connector, black, coupling station on left of A-pillar
- T10a - 10-pin connector, purple, coupling station on left electronics box
- T17d - 17-pin connector, black, coupling station on left of A-pillar
- T17f - 17-pin connector, green, coupling station on left of A-pillar
- V - Windscreen wiper motor
- V5 - Washer pump
- V11 - Headlight washer system pump
- Z20 - Left washer jet heater element
- Z21 - Right washer jet heater element
- 44 - Earth point, lower part of left A-pillar
- 261 - Earth connection, in heated washer jet wiring harness
- 367 - Earth connection 2, in main wiring harness
- 375 - Earth connection 10, in main wiring harness
- 389 - Earth connection 24, in main wiring harness
- 607 - Earth point, on left in plenum chamber
- * - models with headlight washer system
- ** - 9-point relay carrier, behind driver storage compartment
- # - up to model year 2005
- ## - from model year 2006