


## Audi A6

## Current Flow Diagram

No. 26 / 29

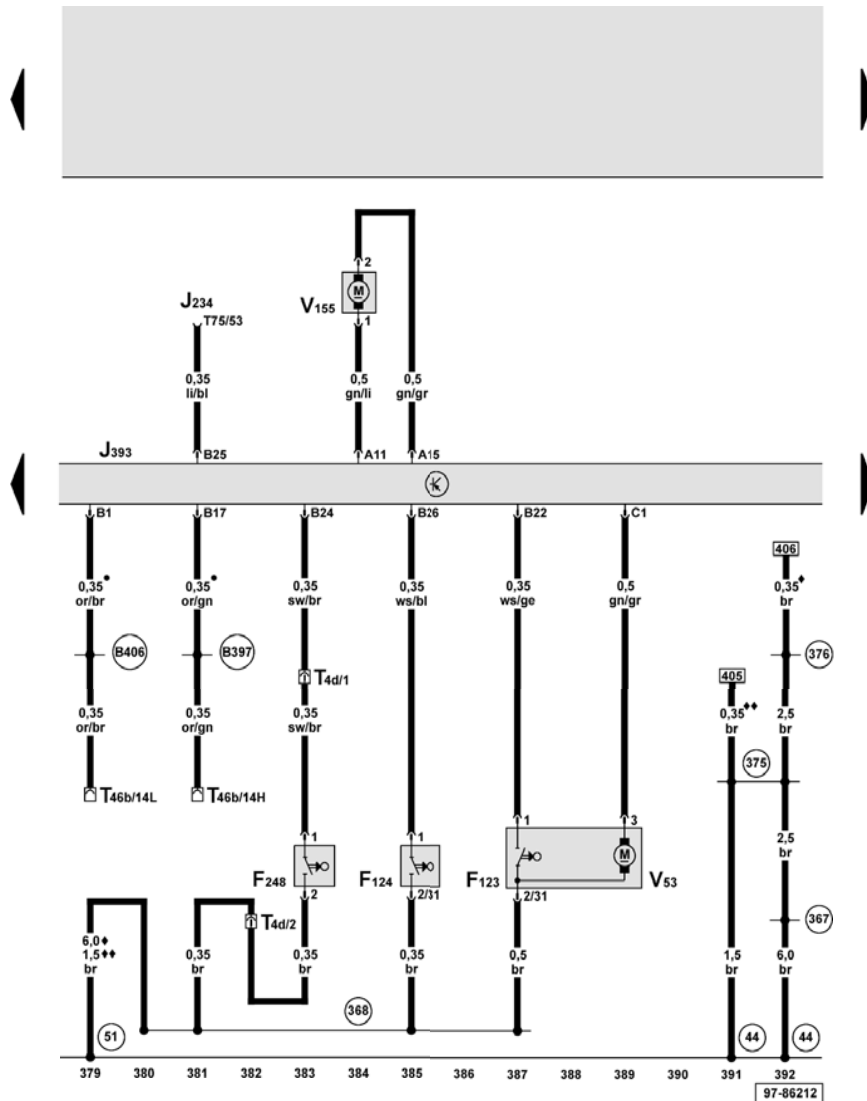

### Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder

- F123 - Rear lid contact switch for anti-theft alarm system
- F124 - Contact switch in lock cylinder for rear lid, anti-theft alarm system, central locking system
- F248 - Release button for rear lid lock cylinder
- J234 - Airbag control unit
- J393 - Convenience system central control unit
- T4d - 4-pin connector, black, rear lid
- T46b - 46-pin connector, CAN separating connector right
- T75 - 75-pin connector, grey, on airbag control unit
- V53 - Rear lid central locking motor
- V155 - Tank filler flap locking motor
- 44 - Earth point, lower part of left A-pillar

- 51 - Earth point, on right in luggage compartment
- 367 - Earth connection 2, in main wiring harness
- 368 - Earth connection 3, in main wiring harness
- 375 - Earth connection 10, in main wiring harness
- 376 - Earth connection 11, in main wiring harness
- B397 - Connection 1 (convenience CAN bus, high), in main wiring harness
- B406 - Connection 1 (convenience CAN bus, low), in main wiring harness
- - CAN bus (data wire)
- ♦ - up to October 2005
- ♦♦ - from November 2005