


Audi A6

Current Flow Diagram

No. 26 / 10

Driver door control unit, driver door ambient lighting, fuel tank flap release button, rear lid remote release button

- A20 - Driver door ambient lighting voltage converter
- E233 - Rear lid remote release button
- E319 - Fuel tank flap release button
- J386 - Driver door control unit
- L164 - Driver door ambient lighting
- T2h - 2-pin connector, on ambient lighting voltage converter
- T2i - 2-pin connector, on ambient lighting voltage converter
- 303 - Earth connection 3, in driver door wiring harness
- R52 - Connection (58s), in driver side door wiring harness
- * - models with auxiliary inner lights
- ** - only USA

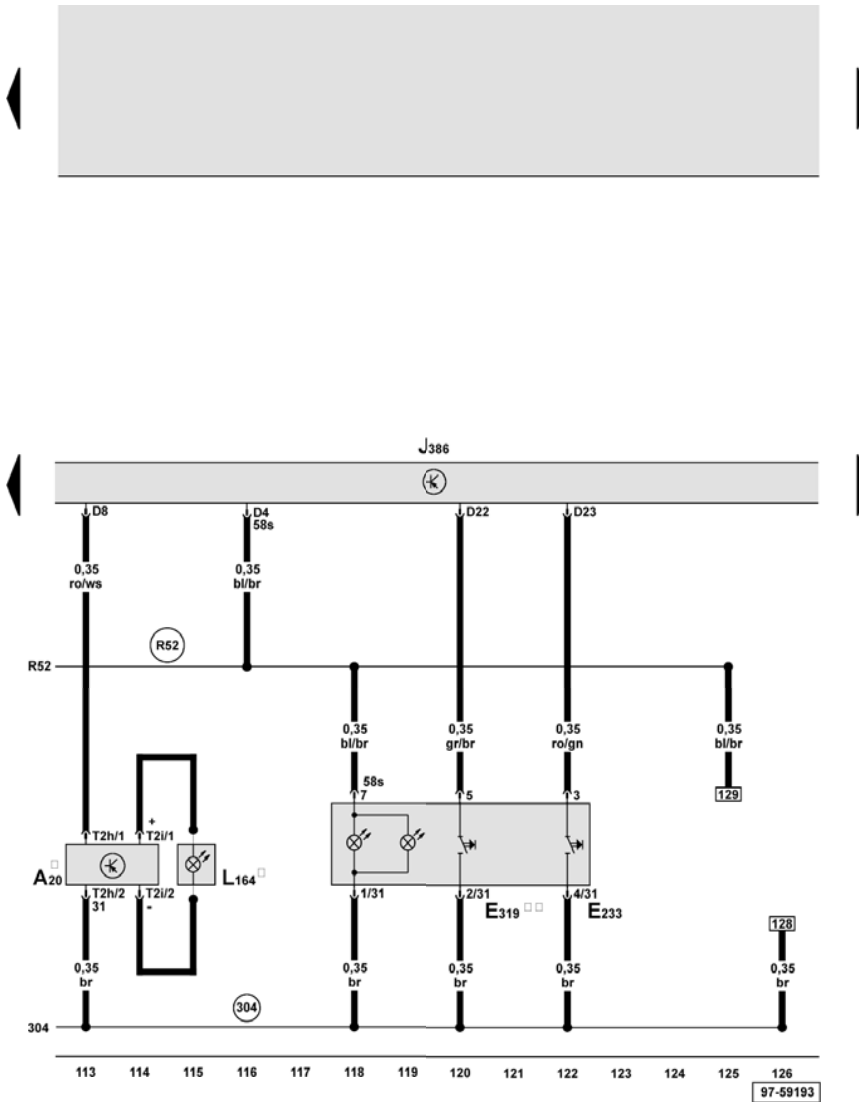


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Audi A6

Current Flow Diagram

No. 26 / 16

Front passenger door control unit, front passenger side window regulator motor, front passenger door ambient lighting, front right entry light, front passenger side door warning lamp, front right door exterior handle illumination bulb

- A21 - Front passenger door ambient lighting voltage converter
- J387 - Front passenger door control unit 
- L163 - Front right door exterior handle illumination bulb
- L165 - Front passenger door ambient lighting
- V148 - Front passenger side window regulator motor
- W32 - Front right entry light
- W36 - Front passenger side door warning lamp
- 304 - Earth connection 3, in front passenger side door wiring harness

- R53 - Connection (58s), in front passenger side door wiring harness

- * - models without auxiliary inner lights
- ** - models with auxiliary inner lights

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

