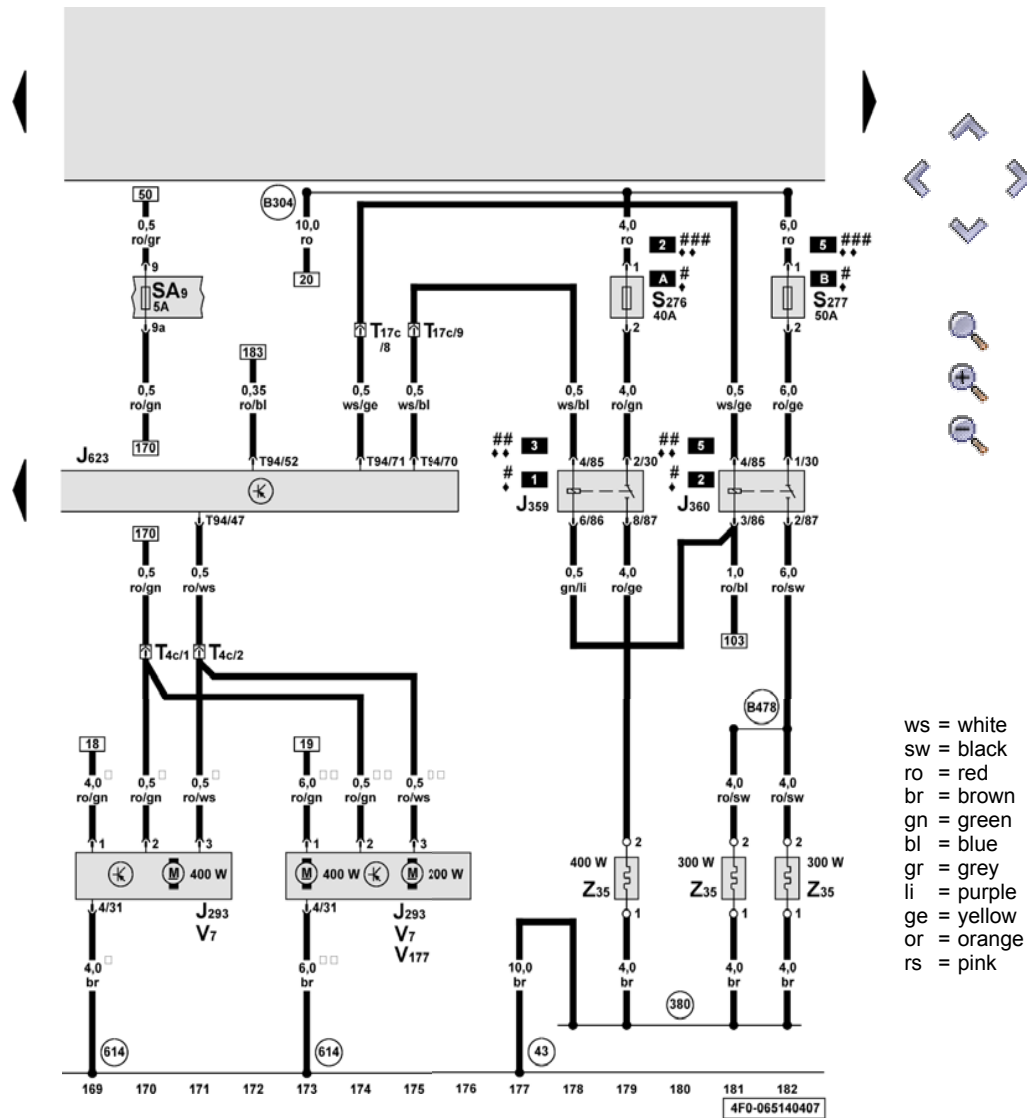


## Audi A6

## Current Flow Diagram

No. 65 / 14


**Engine speed sender, radiator fan control unit, low heat output relay, high heat output relay, radiator fan**

- J293 - Radiator fan control unit
- J359 - Low heat output relay
- J360 - High heat output relay
- J623 - Engine control unit
- S276 - Heater element fuse 1
- S277 - Heater element fuse 2
- SA9 - Fuse 9 on fuse holder A
- T4c - 4-pin connector, black, electronics box, right in plenum chamber, radiator fan
- T17c - 17-pin connector, white, coupling station on electronics box, left in plenum chamber
- T94 - 94-pin connector, black, connector B, on engine control unit
- V7 - Radiator fan
- V177 - Radiator fan 2
- Z35 - Auxiliary heater element
- 43 - Earth point, lower part of right A-pillar
- 380 - Earth connection 15, in main wiring harness
- 614 - Earth point 2, on right in engine compartment
- B304 - Positive connection 8 (30), in main wiring harness
- B478 - Connection 14, in main wiring harness
- \* - standard cooling
- \*\* - heavy-duty cooling
- # - relay carrier on steering cross member
- ## - 9-point relay carrier, behind driver storage compartment
- ### - fuses on bottom onboard supply control unit
- ◆ - up to May 2007
- ◆◆ - from June 2007

## Current Flow Diagram