

## Heater components on vehicle exterior

### Removing and installing dust and pollen filter


- Remove plenum chamber cover.

=> General Body Repairs, Exterior

- → Release catches on tab -A- and fold back the tab.
- Remove the dust and pollen filter element from its housing.

**Note:**

- ☐ To prevent water from entering the dust and pollen filter or the intake duct, make sure that the plenum chamber cover and cowl panel trim are fitted correctly.
- ☐ The dust and pollen filter element should be renewed at regular intervals.

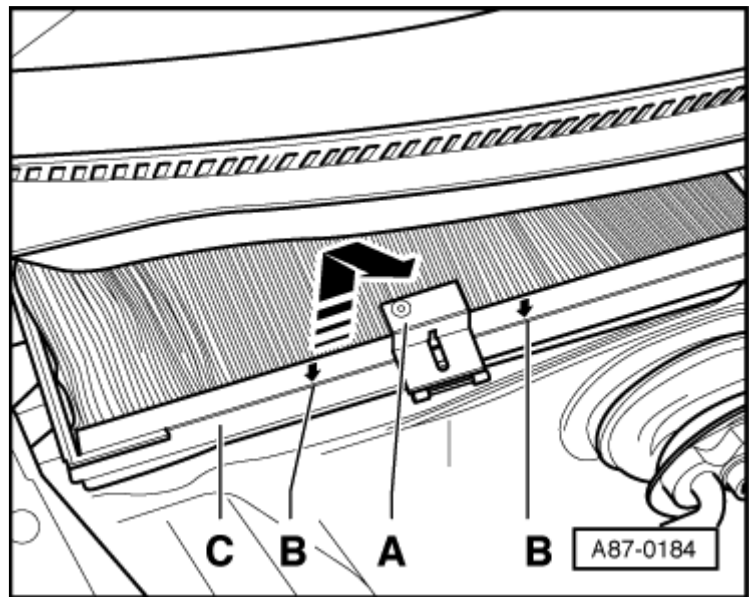

=> Workshop Manual, Maintenance booklet

- ☐ The dust and pollen filter element must be fitted the right way round in frame -C-. Arrows -B- indicate the direction of air flow.
- ☐ With additional activated charcoal insert (combined filter).