


Audi A6

Current Flow Diagram

No. 1 / 32

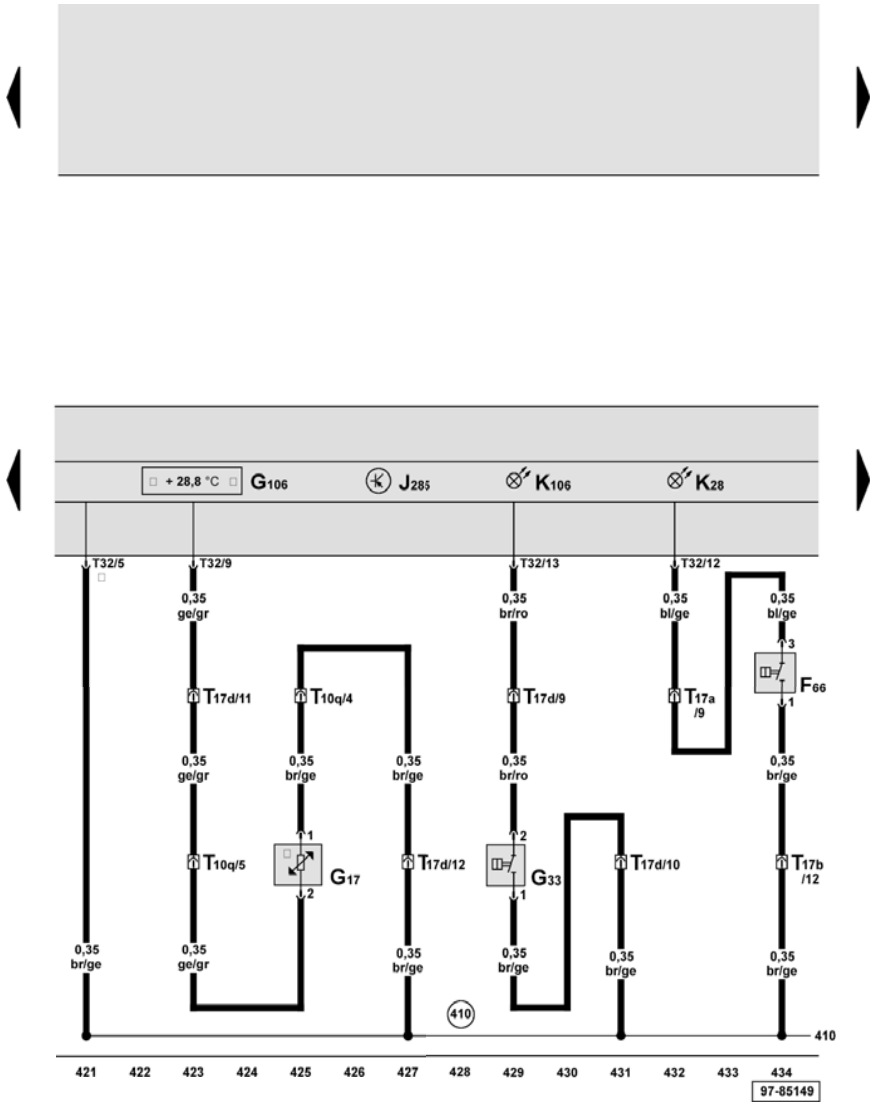

- Display control unit in dash panel insert, ambient temperature sensor, coolant shortage indicator switch, windscreen washer fluid level sender**
- F66 - Coolant shortage indicator switch
 - G17 - Ambient temperature sensor
 - G33 - Windscreen washer fluid level sender
 - G106 - Ambient temperature indicator
 - J285 - Display control unit in dash panel insert
 - K28 - Coolant temperature and coolant shortage warning lamp
 - K106 - Washer fluid low warning lamp
 - T10q - 10-pin connector, black, near left headlight
 - T17a - 17-pin connector, red, coupling station on electronics box, left in plenum chamber
 - T17b - 17-pin connector, black, coupling station on electronics box, left in plenum chamber
 - T17d - 17-pin connector, black, coupling station on left of A-pillar
 - T32 - 32-pin connector, grey, on dash panel insert
 - 410 - Earth connection 1 (sender earth), in main wiring harness
 - * - output sender earth

Audi A6

Current Flow Diagram

No. 1 / 33