


Sliding/tilting roof

Removing and installing sliding roof motor

- Unclip cover -1- at front from headliner in direction of arrow; disconnect electrical connectors and remove cover.

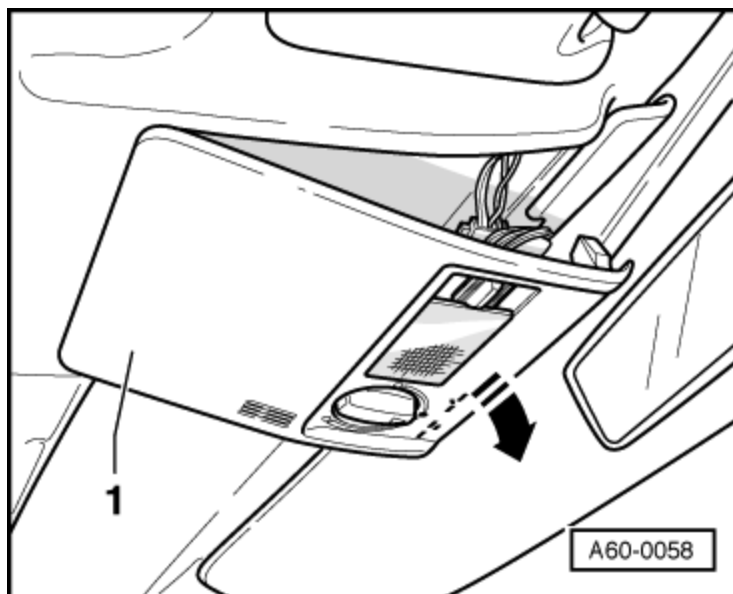

- → Unscrew screws -arrows- (3 Nm).
- Remove sliding roof motor -1-.

Note:

Only remove and install sliding roof motor with roof closed, i.e. only with cable drive and sliding roof motor in zero position.

