

## Activating/deactivating cruise control system

### Sequence of operations

- Connect up the vehicle diagnostic, testing and information system -VAS 5051B- → **Chapter**.

 **Note**


If a fault message appears on the display, refer to → *Operating instructions of VAS 5051B*.

- Touch the **Guided functions** key in the list.

Display on -VAS 5051B-:

- Enter vehicle identification by touching the appropriate message line -1- in accordance with the selection prompt -A-.

The vehicle diagnostic, testing and information system -VAS 5051B- then switches to the next selection level (example; steps may also be skipped depending on type of vehicle):

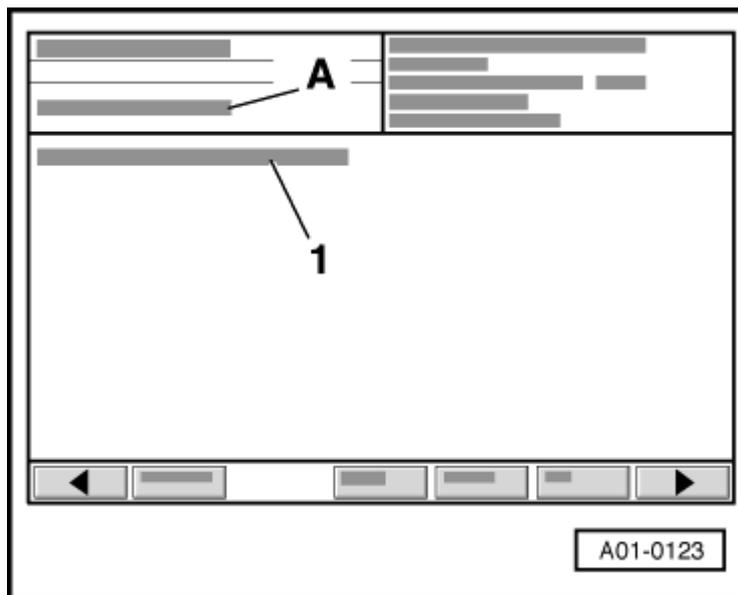

Selection prompt	Message line to be selected
Select make	“Audi”
Select model	“Audi A3 2004 >”
Select model year (example)	“2006 (6)”
Select version (example)	“Five-door”
Select engine code (example)	“BAG 1.6 I FSI / 85 kW”
If vehicle identification has been implemented correctly, press  key to confirm	
Select vehicle system/function (example)	01 - Engine electronics
Select vehicle system/function	J220 - CCS activation or deactivation

- Continue to follow the instructions on the display of -VAS 5051B-.

Following activation/deactivation:

- Press **Go to** key.
- Select “End” function in list.
- Switch off ignition and unplug diagnostic connector.

**Note**

*If entry into “Guided functions” mode is not possible as described with older engine control unit generations, the presence/absence of the cruise control system is programmed in the engine control unit hardware.*