

Removing and installing switch for cruise control system -E45-


Removing

- Remove steering column switch module
→ **Chapter**.


Note

Return ring with slip ring must be removed/installed in centre position (wheels in straight ahead position).

- Carefully release retaining hooks -arrows-.
- Detach return ring with slip ring -2- with steering angle sender -G85--item 1- from steering column switch module.

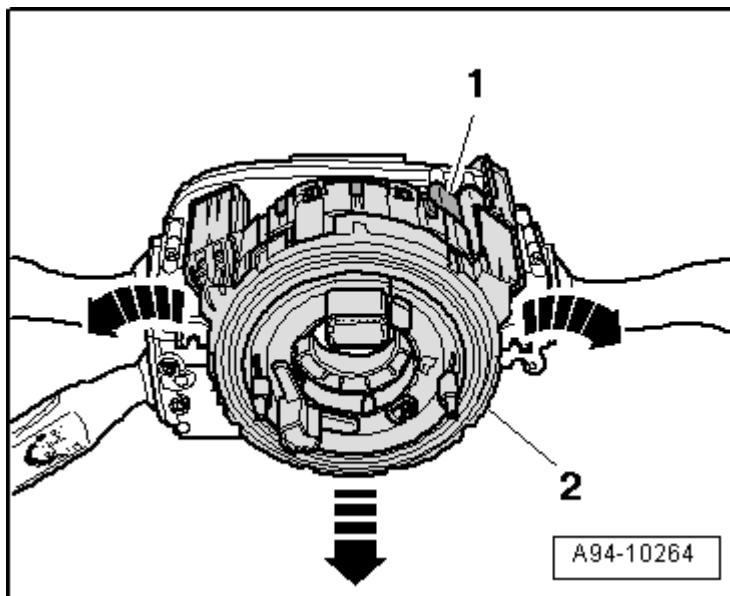

- Unscrew bolts -arrows-.
- Detach steering column electronics control unit -J527--Item 2- from steering column switch module.
- Detach the switch for cruise control system -E45--Item 1- at steering column switch module.

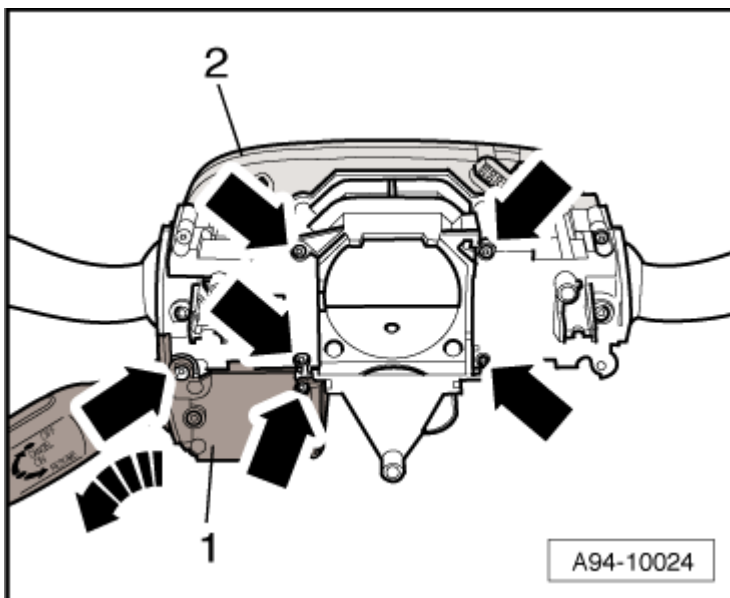

Installing

Further installation is carried out in the reverse order; note the following:

- Make sure all fasteners and the electrical connectors are properly engaged.
- Install steering column switch module
→ **Anchor**.

Tightening torques

Component	Nm
Steering column switch module to steering column electronics control unit -J527-	0.65
Intermittent wiper switch -E22- to steering column electronics control unit -J527-	0.65
Switch for cruise control system -E45- to steering column electronics control unit -J527-	0.65