

Audi A6

Current Flow Diagram

No. 65 / 6

Central locking control unit, left door warning lamp, right door warning lamp

- D - Ignition/starter switch
- E97 - Memory operating unit
- J429 - Central locking control unit
- K133 - Central locking warning lamp -SAFE-
- M27 - Door warning lamp, left
- M28 - Door warning lamp, right
- S14 - Fuse in fuse box
- S238 - Fuse 38 in fuse box
- T2t - 2-pin connector, black, in driver's door
- T2u - 2-pin connector, black, in front passenger's door
- T8c - 8-pin connector, black, in driver's door
- T15h - 15-pin connector, brown, connector point, A pillar, right
- T15i - 15-pin connector, brown, connector point, A pillar, left
- T17a - 17-pin connector, brown, connector point, A pillar, right
- T17e - 17-pin connector, black, connector point, A pillar, left
- A66 - Connection (30a, (ZV/DWA/IR (central locking/anti-theft alarm system/infra-red remote control)), in dash panel wiring harness
- A52 - Positive (+) connection 2 (30), in dash panel wiring harness
- Q11 - Positive (+) connection (30 a), in electric window/central locking and door contact switch wiring harness
- Q12 - Positive (+) connection (30 a), in electric window/central locking and door contact switch wiring harness
- S7 - Connection -2-, in central locking wiring harness

