


Audi A6

Current Flow Diagram

No. 1 / 36

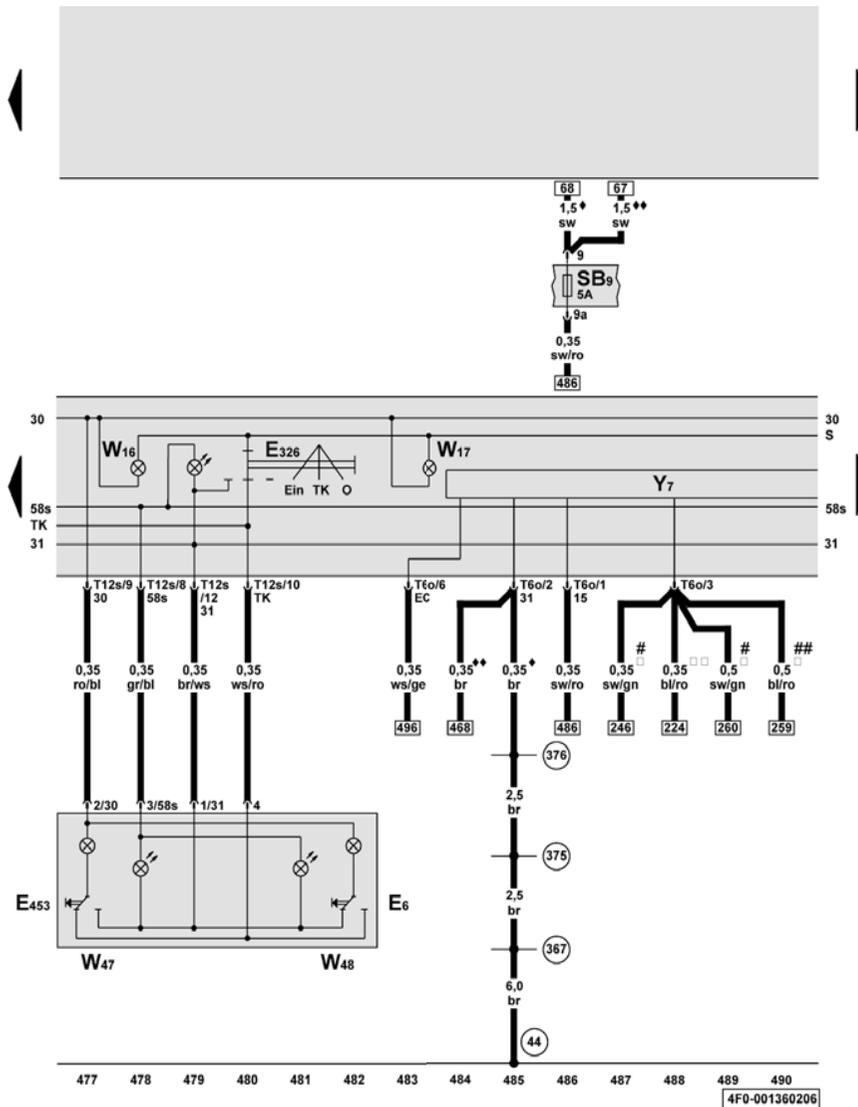

Interior light rear switch, rear left and right interior light, automatic anti-dazzle interior mirror



- E6 - Interior light rear switch
- E326 - Front interior light button
- E453 - Rear left interior light switch 1
- SB9 - Fuse 9 on fuse holder
- T6o - 6-pin connector, black, connector B, on roof console
- T12s - 12-pin connector, black, connector A, on front roof console
- W16 - Left interior light
- W17 - Right interior light
- W47 - Rear left interior light
- W48 - Rear right interior light
- Y7 - Automatic anti-dazzle interior mirror
- 44 - Earth point, lower part of left A-pillar
- 367 - Earth connection 2, in main wiring harness
- 375 - Earth connection 10, in main wiring harness
- 376 - Earth connection 11, in main wiring harness
- * - models with automatic gearbox
- ** - models with manual gearbox
- # - not Japan
- ## - only Japan
- ◆ - up to October 2005
- ◆◆ - from November 2005

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Audi A6

Current Flow Diagram

No. 1 / 37

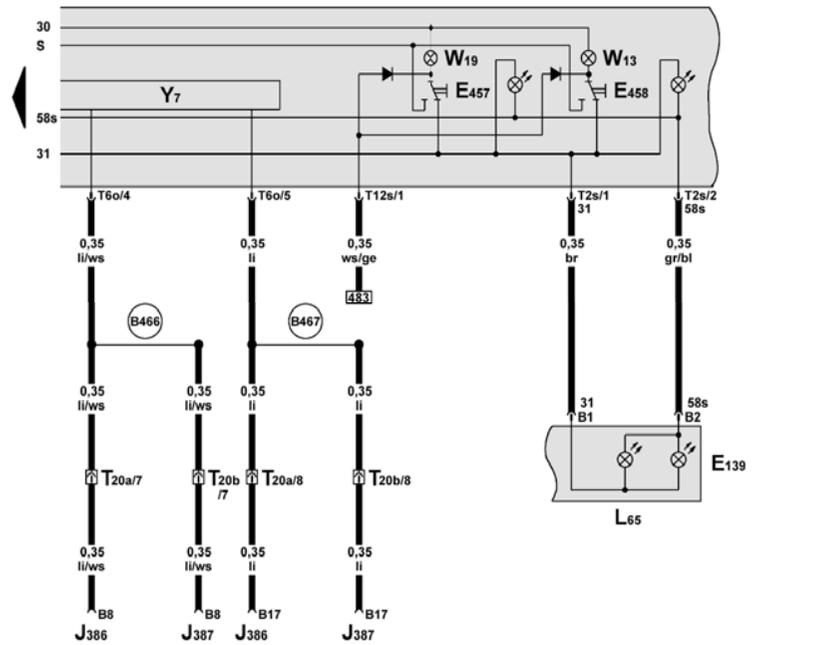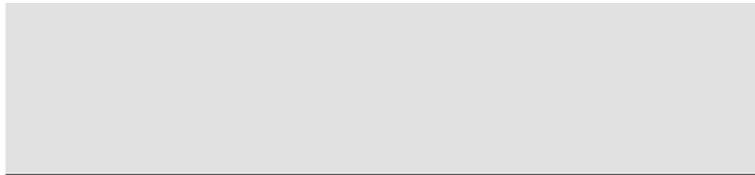

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Automatic anti-dazzle interior mirror, driver and front passenger side reading light, sliding sunroof adjustment regulator

- E139 - Sliding sunroof adjustment regulator
- E457 - Driver side reading light button
- E458 - Front passenger side reading light button
- J386 - Driver door control unit
- J387 - Front passenger door control unit  
- L65 - Sliding sunroof switch illumination bulb
- T2s - 2-pin connector, connector C, on front roof console
- T6o - 6-pin connector, black, connector B, on roof console
- T12s - 12-pin connector, black, connector A, on front roof console
- T20a - 20-pin connector, black, left A-pillar
- T20b - 20-pin connector, black, right A-pillar
- W13 - Front passenger side reading light
- W19 - Driver side reading light
- Y7 - Automatic anti-dazzle interior mirror
- B466 - Connection 2 in main wiring harness
- B467 - Connection 3 in main wiring harness