


## Audi A3

## Current Flow Diagram

No. 126 / 22

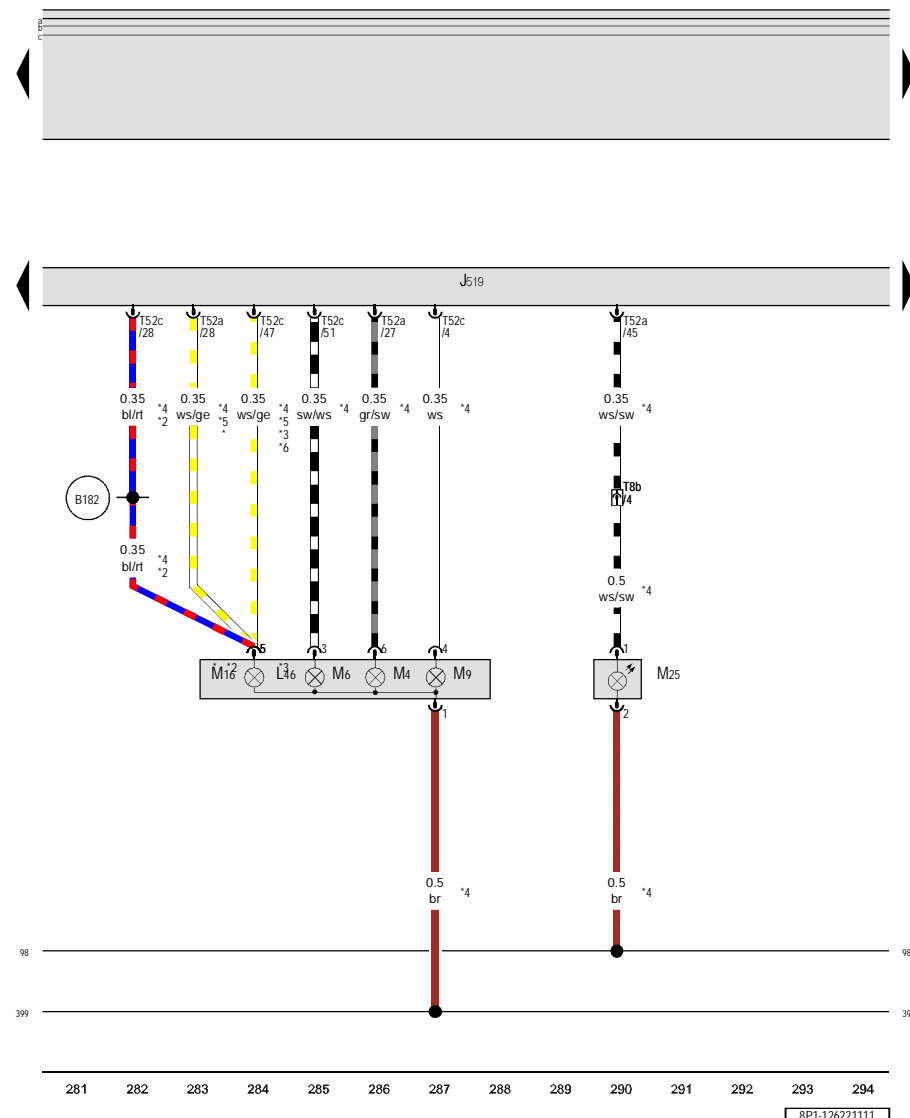


**Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Additional brake light bulb**

- J519 - Onboard supply control unit
- L46 - Rear left fog light bulb
- M4 - Left tail light bulb
- M6 - Rear left turn signal bulb
- M9 - Left brake light bulb
- M16 - Left reversing light bulb
- M25 - Additional brake light bulb
- T8b - 8-pin connector, on left C-pillar
- T52a - 52-pin connector
- T52c - 52-pin connector
- 98 - Earth connection, in rear lid wiring harness
- 399 - Earth connection 34, in main wiring harness
- B182 - Connection (RL), in interior wiring harness
- \* - Only for Mexico
- \*2 - Only right-hand drive models
- \*3 - Not for Mexico
- \*4 - Only models with no US equipment
- \*5 - Only left-hand drive models
- \*6 - Only models with rear fog lights

## Audi A3

## Current Flow Diagram

No. 126 / 23

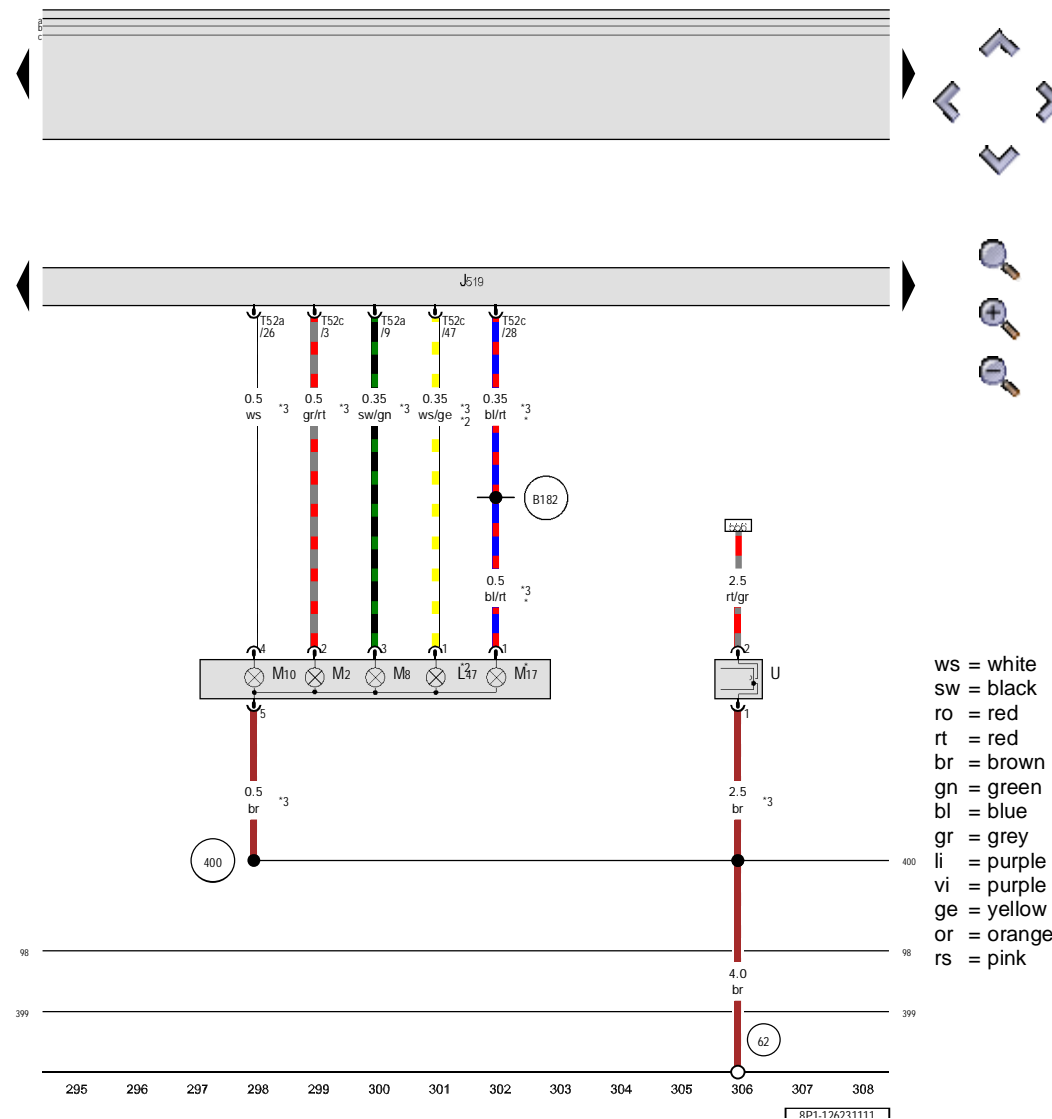

**Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Electric socket**


- J519 - Onboard supply control unit
- L47 - Rear right fog light bulb
- M2 - Right tail light bulb
- M8 - Rear right turn signal bulb
- M10 - Right brake light bulb
- M17 - Right reversing light bulb
- T52a - 52-pin connector
- T52c - 52-pin connector
- U - Electric socket
- 62 - Earth point, right C-pillar
- 98 - Earth connection, in rear lid wiring harness
- 399 - Earth connection 34, in main wiring harness
- 400 - Earth connection 35, in main wiring harness
- B182 - Connection (RL), in interior wiring harness
- \* - Only left-hand drive models
- \*2 - Only right-hand drive models
- \*3 - Only models with no US equipment

8P1.126231111

## Audi A3

## Current Flow Diagram

No. 126 / 24

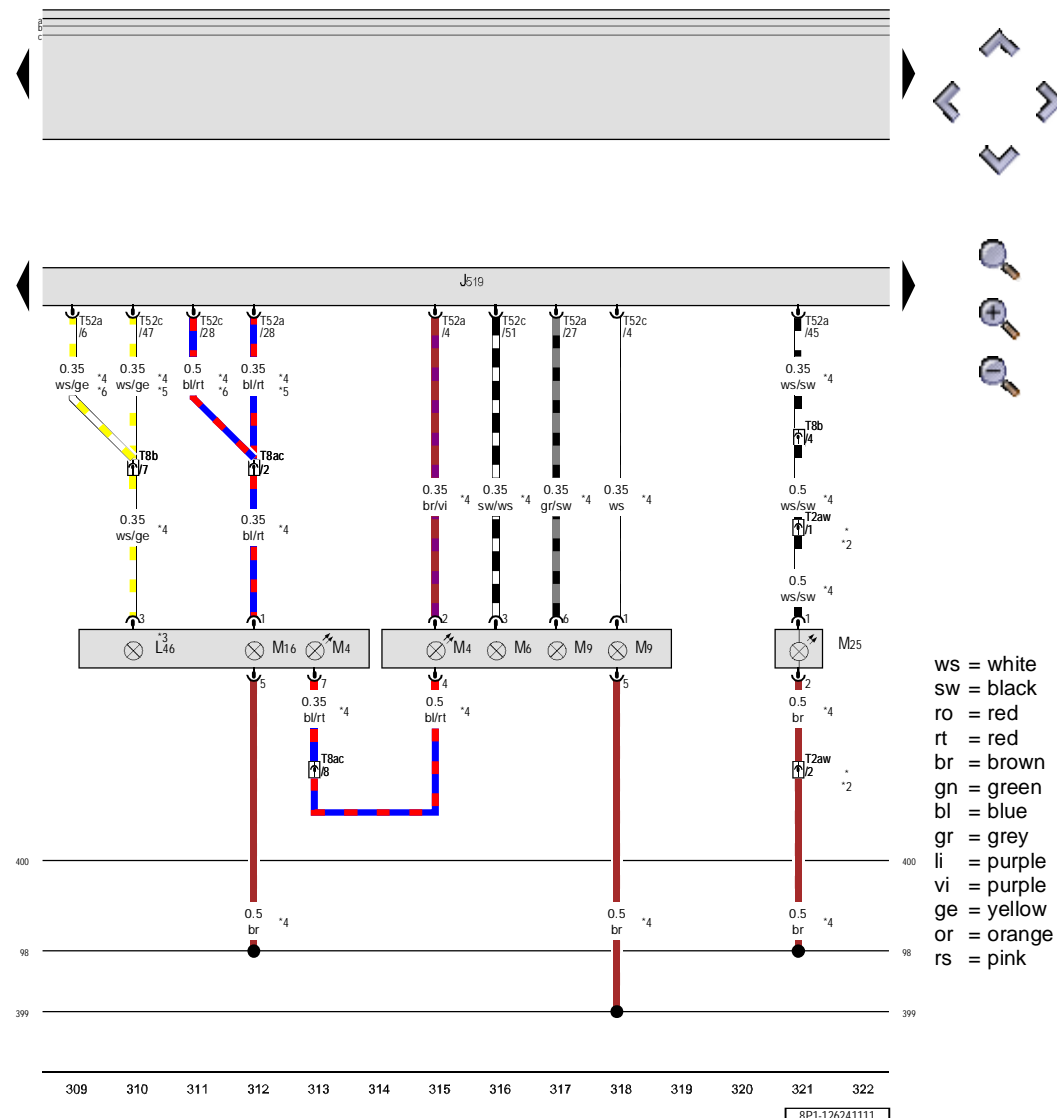


**Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Additional brake light bulb**

- J519 - Onboard supply control unit
- L46 - Rear left fog light bulb
- M4 - Left tail light bulb
- M6 - Rear left turn signal bulb
- M9 - Left brake light bulb
- M16 - Left reversing light bulb
- M25 - Additional brake light bulb
- T2aw - 2-pin connector, in rear lid
- T8ac - 8-pin connector, on left C-pillar
- T8b - 8-pin connector, on left C-pillar
- T52a - 52-pin connector
- T52c - 52-pin connector
- 98 - Earth connection, in rear lid wiring harness
- 399 - Earth connection 34, in main wiring harness
- 400 - Earth connection 35, in main wiring harness
- \* - Optional equipment
- \*2 - Only models with S line equipment
- \*3 - Only models with rear fog lights
- \*4 - Only models with no US equipment
- \*5 - Only left-hand drive models
- \*6 - Only right-hand drive models

## Audi A3

## Current Flow Diagram

No. 126 / 25

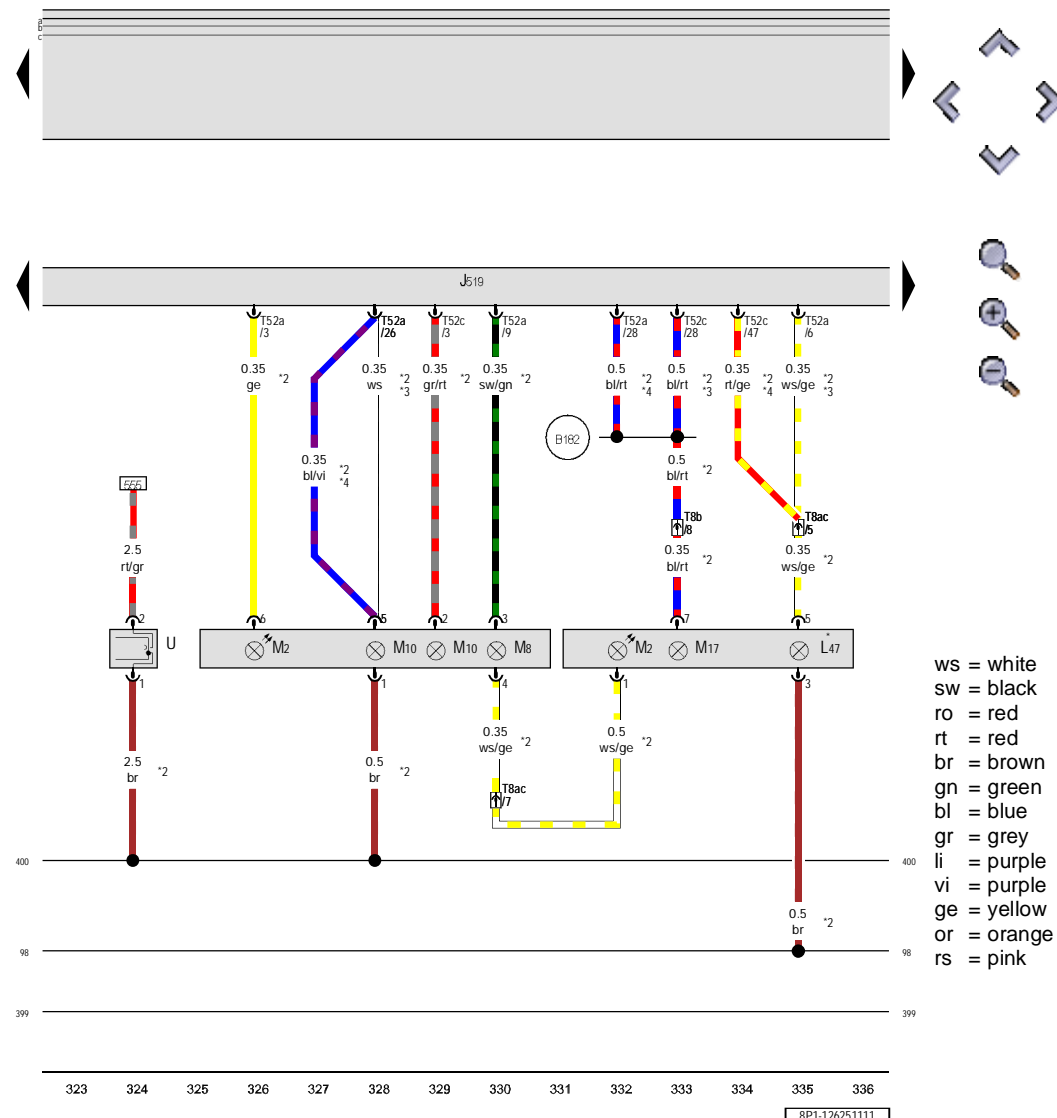


**Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Electric socket**

- J519 - Onboard supply control unit
- L47 - Rear right fog light bulb
- M2 - Right tail light bulb
- M8 - Rear right turn signal bulb
- M10 - Right brake light bulb
- M17 - Right reversing light bulb
- T8ac - 8-pin connector, on left C-pillar
- T8b - 8-pin connector, on left C-pillar
- T52a - 52-pin connector
- T52c - 52-pin connector
- U - Electric socket
- 98 - Earth connection, in rear lid wiring harness
- 399 - Earth connection 34, in main wiring harness
- 400 - Earth connection 35, in main wiring harness
- B182 - Connection (RL), in interior wiring harness
- \* - Only models with rear fog lights
- \*2 - Only models with no US equipment
- \*3 - Only left-hand drive models
- \*4 - Only right-hand drive models

## Audi A3

## Current Flow Diagram

No. 126 / 26

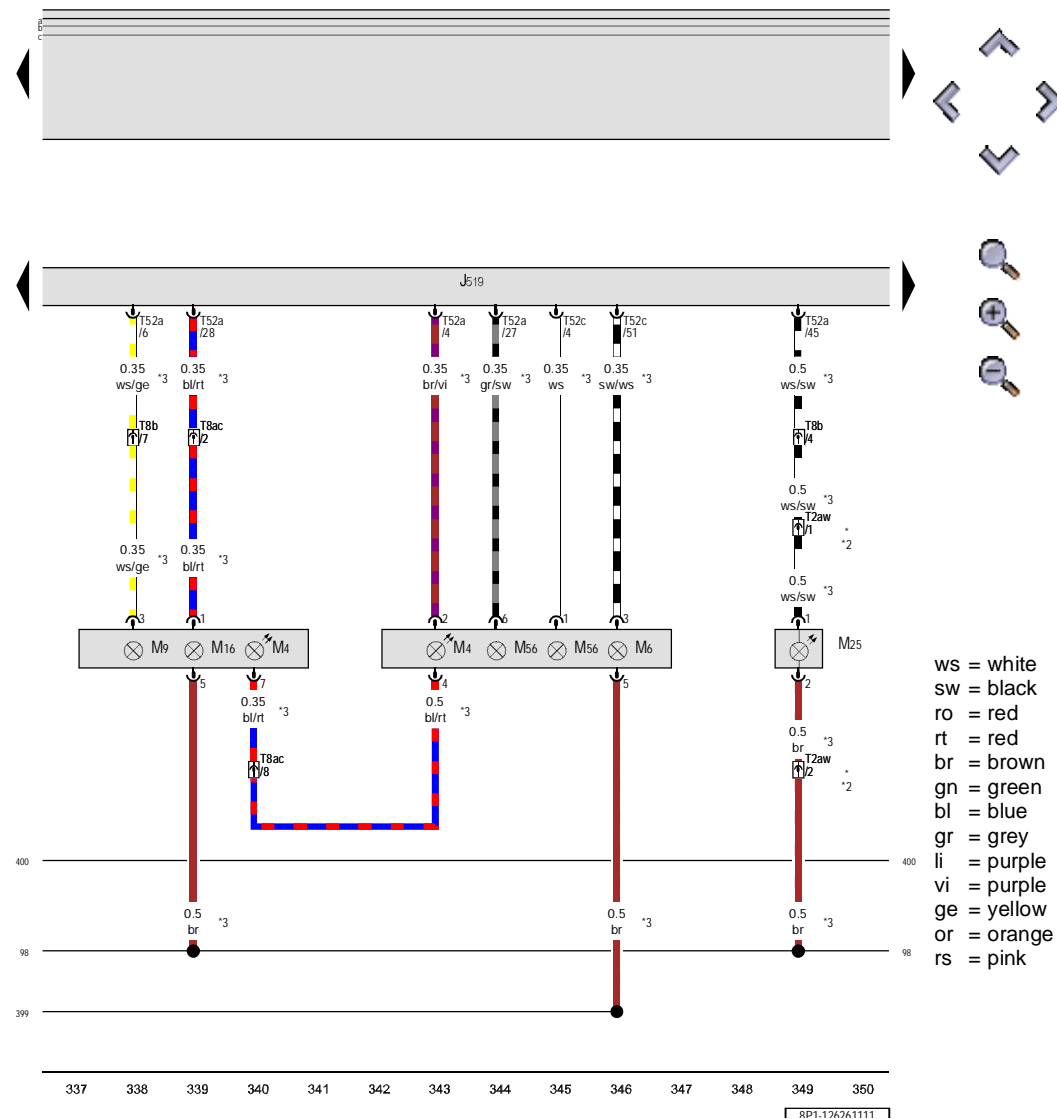


**Onboard supply control unit, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Additional brake light bulb, Left brake and turn signal bulb**

- J519 - Onboard supply control unit
- M4 - Left tail light bulb
- M6 - Rear left turn signal bulb
- M9 - Left brake light bulb
- M16 - Left reversing light bulb
- M25 - Additional brake light bulb
- M56 - Left brake and turn signal bulb
- T2aw - 2-pin connector, in rear lid
- T8ac - 8-pin connector, on left C-pillar
- T8b - 8-pin connector, on left C-pillar
- T52a - 52-pin connector
- T52c - 52-pin connector
- 98 - Earth connection, in rear lid wiring harness
- 399 - Earth connection 34, in main wiring harness
- 400 - Earth connection 35, in main wiring harness
- \* - Optional equipment
- \*2 - Only models with S line equipment
- \*3 - Only models with US equipment

## Audi A3

## Current Flow Diagram

No. 126 / 27

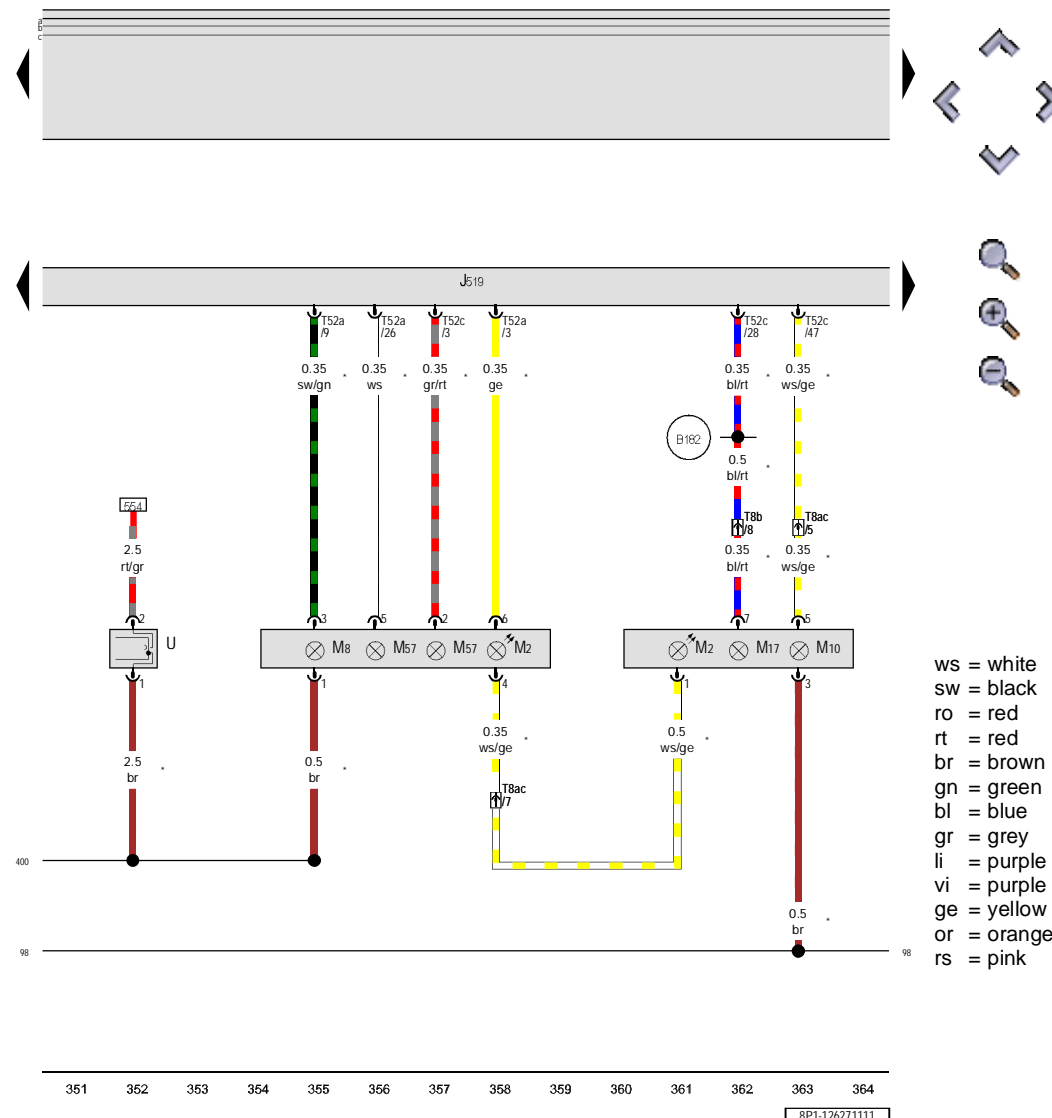


**Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and turn signal bulb, Electric socket**

- J519 - Onboard supply control unit
- M2 - Right tail light bulb
- M8 - Rear right turn signal bulb
- M10 - Right brake light bulb
- M17 - Right reversing light bulb
- M57 - Right brake and turn signal bulb
- T8ac - 8-pin connector, on left C-pillar
- T8b - 8-pin connector, on left C-pillar
- T52a - 52-pin connector
- T52c - 52-pin connector
- U - Electric socket
- 98 - Earth connection, in rear lid wiring harness
- 400 - Earth connection 35, in main wiring harness
- B182 - Connection (RL), in interior wiring harness
- \* - Only models with US equipment


## Audi A3

## Current Flow Diagram

No. 126 / 28

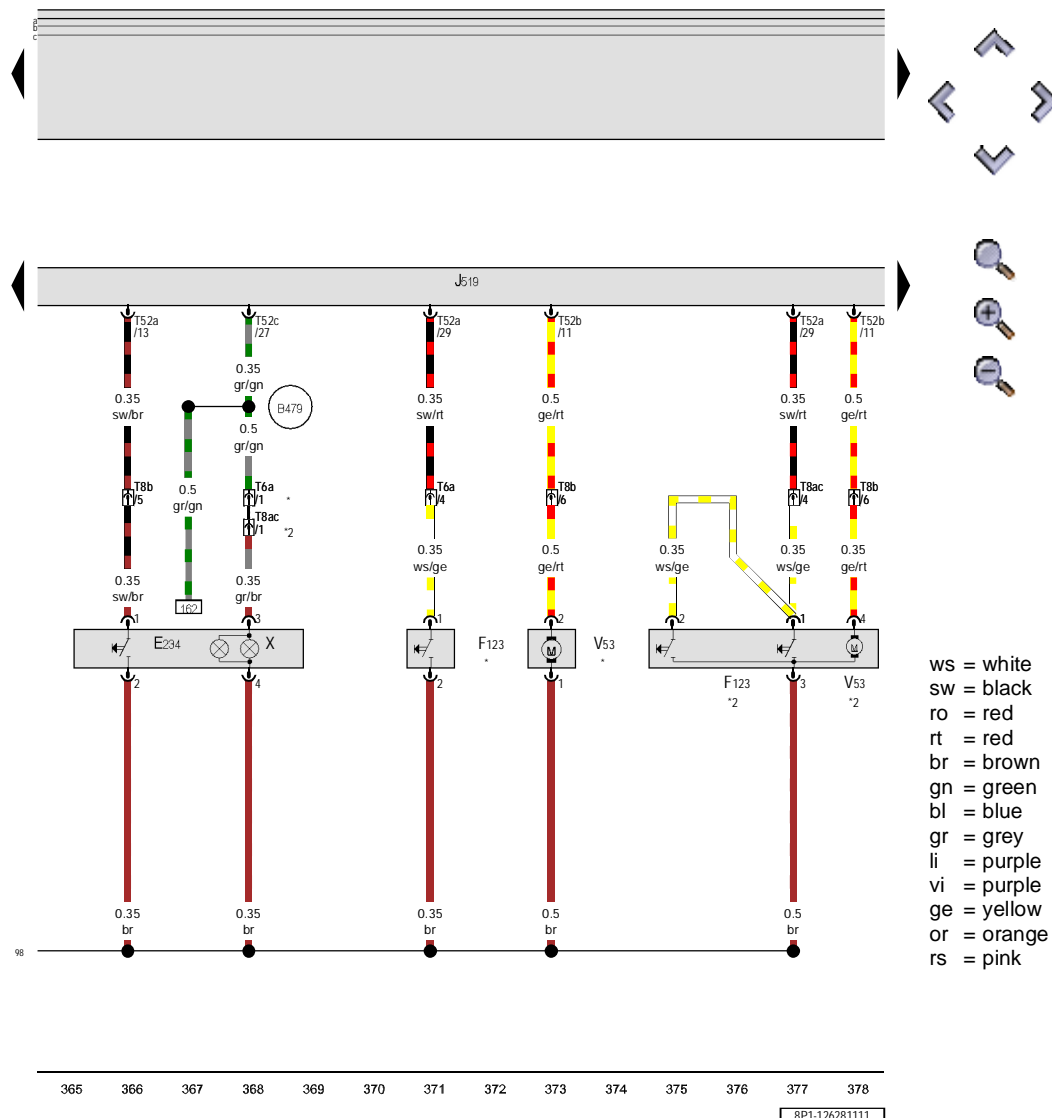

**Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Number plate light**

- E234 - Rear lid handle release button
- F123 - Rear lid contact switch for anti-theft alarm
- J519 - Onboard supply control unit 
- T6a - 6-pin connector, on left C-pillar
- T8ac - 8-pin connector, on left C-pillar
- T8b - 8-pin connector, on left C-pillar
- T52a - 52-pin connector
- T52b - 52-pin connector
- T52c - 52-pin connector
- V53 - Rear lid central locking motor
- X - Number plate light
- 98 - Earth connection, in rear lid wiring harness
- B479 - Connection 15, in main wiring harness
- \* - Only models with 3-doors
- \*2 - Only models with 5-doors